


Fixed GPS to Fixed GPS

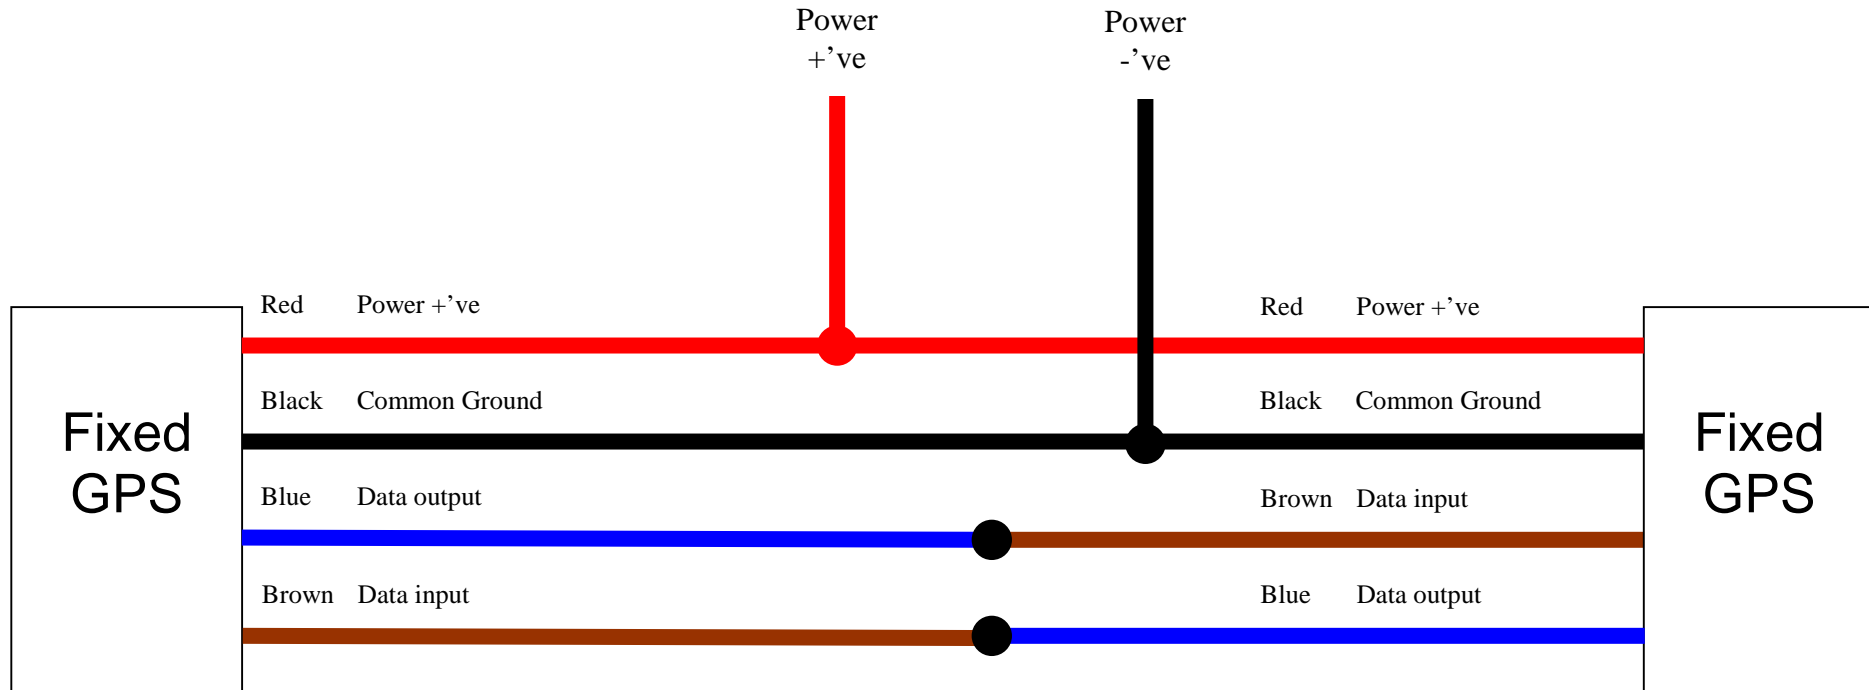

Both units need to be set to the GARMIN or DATA TRANSFER mode.

Data transfer is controlled from one of the units – 'sending' or 'requesting' data from the other unit.